



Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	List		Smart / List
	Mode		D.Menu / Top
	i		Info / Angle
	TV/R Live		TV/Radio /

Original	Substituto	Original	Substituto
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Recall		Back / Return
	Menu		Menu / Home
	CH+		CH+ / Page+
	Text		Text / Goto
	Option		Setup / OPT /
	Vol+		Vol+
	CH-		CH- / Page-
	F1		Shift + 1
	F2		Shift + 2
	Vol-		Vol-
	Rec		Rec / Rec Mode





	Original	Substituto	Original	Substituto
	Play	 SLOW Play / Slow		
	Archive	 MEDIA DISPLAY Display / Media		
	<<	 TUNE- << / Tune-		
	Stop	 HOLD Stop / Hold		
	Pause	 STEP-FREEZE Pause / Step / Freeze		
	>>	 TUNE+ >> / Tune+		
	Red	 NETFLIX SEARCH Red / Netflix / Search		
	Green	 APP REPEAT Green / APP / Repeat		
	Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
	Blue	 Prime Video RANDOM Blue / Prime Video / Random		

