


 
 

 




 





 






 

 

 



 
 







Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	TV		Media
	Text		Text
	Info		Info
	PIP		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 +  + 	Shift + Guide

Original	Substituto	Original	Substituto
	Source		AV
	Menu		Menu
	DTV Guide	 + 	Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	ARC		3D
	Recall		Back
	Mix	 + 	Shift + Text
	Subpage		Subt





Original	Substituto
	 Options
	 Eject
	 Shift + Options
	 Play
	 Shift + Info
	 Red
	 Green
	 Yellow
	 Pause
	 Blue
	 >>
	 Sleep
	 <<
	 I<<
	 D. Menu
	 TV/R
	 >>I

Original	Substituto
	 Shift + Media
	 Dual
	 Shift + Power
	 Shift + Subt
	 Shift + Dual
	 List
	 Format
	 Pre Ch
	 Shift + Red
	 Shift + Yellow
	 Shift + Green
	 Shift + Back

