 


 

 
 



 
 

 




 
 


 
 

 



 



 


 

 

 
 
 





Original	Substituto	Original	Substituto
 Power	 Power	 TV/Radio	 TV/R
 Mute	 Mute	 Recall	 Back
 Red/Repeat	 Red	 Menu	 Menu
 Green/Prog	 Green	 Text	 Text
 Yellow/Slow	 Yellow	 Exit	 Exit
 Blue/Angle	 Blue	 Guide	 Guide
 Play	 Play	 Source	 AV
 Pause	 Pause	 Up	 Up
 Stop	 Stop	 Down	 Down
 <<	 <<	 Right	 Right
 >>	 >>	 Left	 Left
 Goto/Fav	 Pre Ch	 Ok/Ch List	 Ok
 Eject	 Eject	 Vol+	 Vol +
 I<<	 I<<	 Vol-	 Vol -
 >>I	 >>I	 Info	 Info
 Setup	 Options	 Zoom	 Shift + Eject
 Vcr	 Format	 Ch+	 Ch +





	Original	Substituto		Original	Substituto
CH	Ch-	CH	Ch -		
1	1	1	1		
2	2	2	2		
3	3	3	3		
4	4	4	4		
5	5	5	5		
6	6	6	6		
7	7	7	7		
8	8	8	8		
9	9	9	9		
0	0	0	0		
AUDIO	Audio	SOUND DUAL	Dual		
SUBTITLE	Subtitle	AD SUBT	Subt		

	Original	Substituto		Original	Substituto

