



Original	Substituto
Power Receiver	Power
BD	1
DVD	2
DVR / BDR	5
HDMI	0
TV	TV/Radio /
CD	3
NET	7
ADAPTER	Eject / Surround
iPod USB	8
Tuner	6
Video	4
CD-R	9
Input Select	Shift + Left
Input Select ~	Shift + Right
Master Volume	Vol+
Master Volume	Vol-

Original	Substituto
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + I<< / Preset-
Enter	OK
Preset +	Shift + >>I / Preset+
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /







 





















 

 



 

 






 





 

 

 
 





Original	Substituto	Original	Substituto
Down	Down	Stop	Stop / Hold
Return	Back / Return	>>I	>>I / Preset+
Auto / Alc / Direct	Info / Angle	1 Tuner	Shift + 1
Stereo	Sound / Title	2 Tuner	Shift + 2
Repeat	Green / APP / Repeat	3 Tuner	Shift + 3
Standard	Shift + Smart / List	Audio DVD	Shift + Audio / Lang I/II
Random	Blue / Prime Video / Random	4 Tuner	Shift + 4
Adv. Surr.	Guide / EPG / -/-	Signal Sel	Shift + Setup / OPT / Tools
<<	<< / Tune-	MCACC	Fav / Marker / PC
Phase CTRL	Red / Netflix / Search	5 Tuner	Shift + 5
Play	Play / Slow	6 Tuner	Shift + 6
>>	>> / Tune+	Sleep	Sleep / Timer
Status	Exit / Cancel / Clear	Disp	Display / Media
I<<	I<< / Preset-	7 Tuner	Shift + 7
Pause	Pause / Step / Freeze	CH Level	Shift + CH+ /
MPX	Zoom / Size	8 Tuner	Shift + 8
PQLS	Shift + Menu / Home	A.ATT.	Yellow / YouTube / Repeat







 

















 











 

 



 

 


 
 



 

 















Original	Substituto	Original	Substituto
 Power Source	 Power	 1	 1
 DVD	 Shift + 2	 2	 2
 Top Menu	 D.Menu / Top	 3	 3
 Up	 Up	 Audio	 Audio / Lang I/II
 Left	 Left	 4	 4
 Enter	 Shift + OK	 5	 5
 Enter	 OK	 6	 6
 Right	 Right	 7	 7
 Down	 Down	 8	 8
 Return	 Back / Return	 9	 9
 <<	 << / Tune-	 0	 0
 Play	 Play / Slow	 Menu	 Menu / Home
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 >>I	 >>I / Preset+		





Original	Substituto	Original	Substituto
 Power Source	 Power	 1	 1
 Tuner	 Shift + 6	 2	 2
 Master Volume	 Vol+	 3	 3
 Master Volume	 Vol-	 4	 4
 Mute	 Mute / Dimmer	 5	 5
 Band	 Subtitle / EQ	 6	 6
 Tune+	 >> / Tune+	 Disp	 Display / Media
 Tune+	 Up	 7	 7
 T.Edit	 Text / Goto	 8	 8
 Preset+	 >>  / Preset+	 9	 9
 Preset-	 Left	 D.Access	 D.Menu / Top
 Enter	 OK	 0	 0
 Preset-	  << / Preset-	 Class	 Shift + Display / Media
 Preset+	 Right	 Menu	 Menu / Home
 Tune-	 << / Tune-	 Search	 Red / Netflix / Search
 Tune-	 Down		
 MPX	 Zoom / Size		

