















 

 













 





Original	Substituto	Original	Substituto
Power Receiver	Power	3 Tuner	Shift + 3
DVD	2	HDMI Out	AV / Input / RDS
BD	1	4 Tuner	Shift + 4
DVR	5	Signal Sel	Shift + Setup / OPT / Tools
HDMI	0	MCACC	Fav / Marker / PC
TV	TV/Radio /	5 Tuner	Shift + 5
CD	3	6 Tuner	Shift + 6
CD-R	9	Sleep	Sleep / Timer
Home Media	Shift + Menu /	7 Tuner	Shift + 7
iPod / USB	8	SBch	Eject / Surround
Tuner	6	8 Tuner	Shift + 8
Video 1	4	A.ATT.	Yellow / YouTube / Repeat
Video 2	7	9 Tuner	Shift + 9
Input Select	Shift + Left	Dimmer	Shift + Mute / Dimmer
1 Tuner	Shift + 1	D.Access	Shift + D.Menu / Top Menu
Input Select	Shift + Right	CH Level	Shift + CH+ /
2 Tuner	Shift + 2	0 Tuner	Shift + 0









Original	Substituto
 Class	 Shift + Display / Media
 Enter (Class)	 Shift + OK
 Master Volume	 Vol+
 Master Volume	 Vol-
 Mute	 Mute / Dimmer
 Top Menu	 D.Menu / Top
 Band	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Tune+	 Shift + >> /
 Up	 Up
 Tools	 Setup / OPT /
 T.Edit	 Text / Goto
 Video	 Picture / Format
 Left	 Left
 Preset -	 Shift + << / Preset-
 Enter	 OK
 Preset +	 Shift + >> / Preset+

Original	Substituto
 Right	 Right
 iPod CTRL	 Smart / List
 Home Menu	 Menu / Home
 Tune-	 Shift + << /
 Down	 Down
 Return	 Back / Return
 Auto / Alc / Direct	 Info / Angle
 Stereo	 Sound / Title
 Repeat	 Green / APP / Repeat
 Standard	 Shift + Smart / List
 Random	 Blue / Prime Video / Random
 Adv. Surr.	 Guide / EPG / -/-
 <<	 << / Tune-
 Phase CTRL	 Red / Netflix / Search
 Play	 Play / Slow
 >>	 >> / Tune+
 Status	 Exit / Cancel / Clear





Original	Substituto	Original	Substituto
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	MPX		Zoom / Size
	PQLS		Shift + Info / Angle
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Audio DVD		Shift + Audio / Lang I/II
	Disp		Display / Media
	CH -		CH- / Page-
	CH +		CH+ / Page+

Original	Substituto	Original	Substituto





Original	Substituto
Power Source	Power
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Top Menu	D.Menu / Top
Up	Up
Left	Left
Enter	Shift + OK
Enter	OK

Original	Substituto
Right	Right
Down	Down
Return	Back / Return
Menu	Menu / Home
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
Audio	Audio / Lang I/II





Original	Substituto
Power Source	Power
Tuner	Shift + 6
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
D.Access	D.Menu / Top
0	0
Class	CH- / Page-
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer

Original	Substituto
Band	Smart / List
Tune+	>> / Tune+
Tune+	Up
T.Edit	Text / Goto
Preset-	Left
Preset-	I<< / Preset-
Enter	OK
Preset+	>>I / Preset+
Preset+	Right
Search	Red / Netflix / Search
Tune-	<< / Tune-
Tune-	Down
Menu	Menu / Home
MPX	CH+ / Page+
Disp	Display / Media

