



Original	Substituto
Off	Shift + Power
On	Power
Mute	Mute / Dimmer
AVR	Smart / List
DVD	Shift + 2
CD	Shift + 3
Tape	Shift + 5
VID1/VCR	Shift + 4
VID2/TV	Shift + 1
VID3/CBL/SAT	Shift + 0
VID4	Shift + 7
AM/FM	Shift + 6
6 CH	Shift + 8
Sleep	Sleep / Timer
Test	Text / Goto
Vol+	Vol+
Surr.	Eject / Surround

Original	Substituto
Night	TV/Radio /
M-Room	Zoom / Size
Vol-	Vol-
CH.	Info / Angle
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	OK
Right	Right
Digital	D.Menu / Top
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2
3	3
4	4
5	5





Original	Substituto	Original	Substituto
	6		6
	7		7
	8		8
	Tun-M		Red / Netflix / Search
	9		9
	0		0
	Mem		Green / APP / Repeat
	Tuning ▲		>> / Tune+
	Direct		Back / Return
	Clear		Exit / Cancel / Clear
	Preset ▲		>>I / Preset+
	Tuning ▼		<< / Tune-
	OSD		Display / Media
	RDS		AV / Input / RDS
	Preset ▼		I<< / Preset-
	<< DVD		Shift + << /
	Play DVD		Shift + Play / Slow

Original	Substituto	Original	Substituto
	>> DVD		Shift + >> /
	Stop DVD		Shift + Stop /
	Pause DVD		Shift + Pause / Step /
	I<</Skip Down		Shift + I<< / Preset-
	Skip Up/>>I		Shift + >>I / Preset+





Original		Substituto		Original		Substituto	
	Power Off		Shift + Power		3		3
	Power On		Power		4		4
	Vol+		Vol+		5		5
	Night		TV/Radio /		6		6
	[≡] / M-Room		Zoom / Size		7		7
	Vol-		Vol-		8		8
	CH.		Info / Angle		Tun-M		Red / Netflix / Search
	Up		Up		9		9
	SPKR/Menu		Menu / Home		0		0
	Left		Left		Mem		Green / APP / Repeat
	Set		OK		Direct		Back / Return
	Right		Right		Clear		Exit / Cancel / Clear
	Digital/Exit		D.Menu / Top		Preset ▲		Shift + >>I / Preset+
	Down		Down		RDS		AV / Input / RDS
	Delay/Normal		Setup / OPT /		Preset ▼		Shift + I<< / Preset-
	1		1		<<		<< / Tune-
	2		2		Play		Play / Slow





Original	Substituto
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze
	 I<< / Preset-
	 >>I / Preset+

Original	Substituto





Original	Substituto	Original	Substituto
Power On	Power	Mem	Green / APP / Repeat
Power Off	Shift + Power	RDS	AV / Input / RDS
Vol-	Vol-	>>	>> / Tune+
Vol+	Vol+	<<	<< / Tune-
SPKR/Menu	Menu / Home	Play	Play / Slow
1	1	Stop	Stop / Hold
Delay/Normal	Setup / OPT /	Direct	Back / Return
2	2	Pause	Pause / Step / Freeze
3	3	Preset ▲	CH+ / Page+
4	4	>>I	>>I / Preset+
5	5	I<<	I<< / Preset-
6	6	Power (On/Off)	Mute / Dimmer
7	7	PR+ VCR	Shift + CH+ /
8	8	PR- VCR	Shift + CH- /
9	9	Vol- VCR	Shift + Vol-
0	0	Vol+ VCR	Shift + Vol+
Tun-M	Red / Netflix / Search	1 VCR	Shift + 1





Original	Substituto
2	2 VCR SHIFT + DVD 2 Shift + 2
3	3 VCR SHIFT + CD - STB 3 Shift + 3
4	4 VCR SHIFT + VIDEO 4 Shift + 4
5	5 VCR SHIFT + TAPE 5 Shift + 5
6	6 VCR SHIFT + TUNER 6 Shift + 6
7	7 VCR SHIFT + AUX - HDD 7 Shift + 7
8	8 VCR SHIFT + USB 8 Shift + 8
9	9 VCR SHIFT + BLUETOOTH 9 Shift + 9
0	0 VCR SHIFT + HDMI - SAT 0 Shift + 0
CLEAR	Clear VCR SHIFT + CLEAR/EXIT Shift + Exit / Cancel / Clear
	Play VCR SHIFT + SLOW Shift + Play /
	Stop VCR SHIFT + HOLD Shift + Stop /
	Rec VCR SHIFT + REC MODE Shift + Rec / Rec Mode
	>> VCR SHIFT + TUNE+ Shift + >> /
	<< VCR SHIFT + TUNE- Shift + << /

Original	Substituto





Original	Substituto	Original	Substituto
	<>		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Original	Substituto

