



 

 
 




 

 

 
 




 
 
 

 






	Original	Substituto		Original	Substituto
	Power		Power		Tv Display
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Enter
	5		5		Vol+
	6		6		Vol-
	7		7		S.M.
	8		8		P.M.
	9		9		CH+
	0		0		CH-
	Recall	 + 	Shift + Guide		EPG Page Up
	Menu		Back		EPG Page Down
	Source		Menu		Sleep
	Exit		AV		P.G.
			Exit		Aspect
					Info
					Up
					Down
					Right
					Left
			Ok		
			Vol +		
			Vol -		
			Smart		
			Media		
			Ch +		
			Ch -		
		 + 	Shift + Up		
		 + 	Shift + Down		
			Sleep		
			Format		
			3D		





Original	Substituto	Original	Substituto
 CH List	 List		
 EPG	 Guide		
 FAV	 Pre Ch		
 DTV Strenght	 D. Menu		
 TV	 TV/R		
 AV	 Eject		
 HDMI	 Text		
 YPbPr	 Shift + Format		
 CC	 Subt		
 MTS/SAP	 Dual		
 VGA	 Options		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

Original	Substituto

