


 

 







 

 

 

 

 

 

















 


 



Original	Substituto	Original	Substituto
	Power		Power
	Sleep		Sleep
	Open/Close		Eject
	Mute		Mute
	V.Sel		Smart
	AV		AV
	DVD		Media
	Tuner		TV/R
	Mode		Format
	Tone		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Original	Substituto	Original	Substituto
	8		8
	9		9
	0		0
	Title/Rotate		Guide
	Menu		Menu
	Info		Info
	Exit		Exit
	I<		I<<
	>I		>>I
	<<		<<
	>>		>>
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +





Original	Substituto	Original	Substituto
 Vol-	 Vol -		
 Stop/FM Mode	 Stop		
 Play	 Play		
 Pause/RDS Search	 Pause		
 RDS/Disp/Clear	 Options		

