





Original	Substituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Substituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	


 
 









Original	Substituto	Original	Substituto
	Power		Power
	Menu		Menu
	Top Menu		D. Menu
	F1		Smart
	F2		Media
	[:=]		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Pre Ch



















 
 


 
 


 
 




 






 

 


 
 



 


 


 



 
 


 
 
 


Original	Substituto	Original	Substituto
	Clear		Exit
	Display		Info
	Tools/Options		Options
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Return/Exit		Back
	Menu/Home		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>









Original	Substituto	Original	Substituto
 Power	 Power	 Display	 Info
 Source	 AV	 Mute	 Mute
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Menu/Home	 Media
 4	 4	 Return/Exit	 Back
 5	 5	 Up	 Up
 6	 6	 OK	 Ok
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Play	 Play
 Clear	 Exit	 Stop	 Stop
 Enter	 Pre Ch	 Pause	 Pause
 Theatre	 Smart	 >>/Tuning+	 >>
 Sound Field	 Dual	 <</Tuning-	 <<
 AMP Menu	 Menu	 >>I/Preset+	 >>I



