
 




 

 



 

 

 

 


















| Original | Substituto |
|---|--|
|  Power On |  Power |
|  Power Off |  Shift + Power |
|  Zone 2 |  Media |
|  Mute |  Mute |
|  Cable/SAT |  Shift + 1 |
|  STB |  Shift + 2 |
|  TV |  Shift + 3 |
|  Disc |  Shift + 4 |
|  MHL |  Shift + 5 |
|  AUX |  Shift + 6 |
|  Audio |  Shift + 7 |
|  Game |  Shift + 8 |
|  AVR |  Shift + 9 |
|  USB |  Shift + Guide |
|  Network |  Shift + 0 |
|  Radio |  Shift + Pre Ch |
|  Surr Mode |  Dual |

| Original | Substituto |
|---|---|
|  OSD Menu |  Menu |
|  Up |  Up |
|  Left |  Left |
|  OK |  Ok |
|  Right |  Right |
|  Down |  Down |
|  Back/Exit |  Back |
|  Home |  Smart |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |






 





 

 



 

 

 

 













| Original | Substituto | Original | Substituto |
|----------|---------------|----------|------------|
| | 0 | | 0 |
| | Clear | | Exit |
| | Test | | Text |
| | Vol+ | | Vol + |
| | Vol- | | Vol - |
| | Delay | | Options |
| | Info/Option | | Info |
| | Sleep | | Sleep |
| | Dim | | List |
| | CH/Tuner Up | | Ch + |
| | CH/Tuner Down | | Ch - |
| | P-Scan / Top | | D. Menu |
| | Direct | | TV/R |
| | Mem | | Rec |
| | RDS/* | | Subt |
| | I< | | I<< |
| | << | | << |

| Original | Substituto | Original | Substituto |
|----------|------------|----------|------------|
| | >> | | >> |
| | > | | >> |
| | Stop | | Stop |
| | Play | | Play |
| | Pause | | Pause |
| | PrevCH | | Pre Ch |





| Original | Substituto |
|---|--|
|  Power On |  Power |
|  Power Off |  Shift + Power |
|  Zone 2 |  Media |
|  Mute |  Mute |
|  Cable/SAT |  Shift + 1 |
|  STB |  Shift + 2 |
|  TV |  Shift + 3 |
|  Disc |  Shift + 4 |
|  MHL |  Shift + 5 |
|  AUX |  Shift + 6 |
|  Audio |  Shift + Dual |
|  Game |  Shift + 8 |
|  AVR |  Shift + 9 |
|  USB |  Shift + Guide |
|  Network |  Shift + 0 |
|  Radio |  Shift + Pre Ch |
|  Surr MOde |  Dual |

| Original | Substituto |
|---|---|
|  OSD Menu |  Menu |
|  Up |  Up |
|  Left |  Left |
|  OK |  Ok |
|  Right |  Right |
|  Down |  Down |
|  Back/Exit |  Back |
|  Home |  Smart |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |



