 








 


 

 

 


 

 

 

 



 





 



 
 





 


 
 



 


 


 





 





 
 


 

 




 

 


 
 



 

 



 

 





 

 

 



Original	Substituto
	 AV / Input / RDS
	 Power
	 +  Shift + OK
	 Picture / Format
	 +  Shift + Audio / Lang I/II
	 TV/Radio /
	 Smart / List
	 +  Shift + Info / Angle
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Substituto
	 AD
	 0
	 Back / Return
	 Vol+
	 Info / Angle
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 +  Shift + Exit / Cancel / Clear
	 Guide / EPG / -/-
	 +  Shift + Up
	 Exit / Cancel / Clear
	 +  Shift + Left
	 Up
	 +  Shift + Right
	 Left





Original	Substituto	Original	Substituto
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	↓		Shift + Down
	Return		Shift + Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Media Player		Display / Media
	Subtitle		Subtitle / EQ
	<</[≡+]		<< / Tune-
	Play		Play / Slow
	>>/[≡◇]		>> / Tune+
	<</[≡?]		<< / Preset-

Original	Substituto	Original	Substituto
	Stop		Stop / Hold
	Pause/Step/[▼]		Pause / Step / Freeze
	>> /[O]/[≡x]		>>  / Preset+
	Power Regza Link		Shift + Power
	Audio Regza Link		Audio / Lang I/II
	Set Up Regza Link		Setup / OPT /
	Open/Close Regza Link		Eject / Surround
	Root Regza Link		Sleep / Timer
	Contens Regza		Shift + D.Menu / Top Menu
	Top Regza Link		D.Menu / Top
	DVD Regza Link		Shift + 2

