


 


 













 

 
 

 

 
 




| Original | Substituto |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Off Timer |  Sleep / Timer |
|  Guide |  Guide / EPG / -/-- |
|  Up |  Up |
|  Tv/AV |  AV / Input / RDS |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Menu |  Menu / Home |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  [=]/Text |  Text / Goto |

| Original | Substituto |
|--|---|
|  [=◇]/F.P. |  Smart / List |
|  [=i]/Index |  Display / Media |
|  [=+]/Hold |  Shift + Stop / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  C |  Back / Return |
|  0/VCR |  0 |
|  0/VCR |  Shift + 4 |
|  i |  Info / Angle |
|  CH+ |  CH+ / Page+ |





| Original | Substituto | Original | Substituto |
|----------------|-----------------------|----------|------------|
| Vol+ | Vol+ | | |
| CH- | CH- / Page- | | |
| Vol- | Vol- | | |
| [+]/Aspect | Picture / Format | | |
| N | D.Menu / Top | | |
| Power VCR | Shift + Power | | |
| Rec VCR | Rec / Rec Mode | | |
| Programme Down | Shift + CH- / | | |
| Programme Up | Shift + CH+ / | | |
| << VCR | << / Tune- | | |
| >> VCR | >> / Tune+ | | |
| Stop VCR | Stop / Hold | | |
| Pause/Step VCR | Pause / Step / Freeze | | |
| Play VCR | Play / Slow | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



