




 









Original	Substituto	Original	Substituto
 Standby	 Power	 Audio	 Audio / Lang I/II
 DTV/VCR	 AV / Input / RDS	 0	 0
 EPG	 Guide / EPG / /--	 Game	 Display / Media
 Favorite	 Fav / Marker / PC	 Text	 Text / Goto
 Info	 Info / Angle	 TV/Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Play	 Play / Slow
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Stop	 Stop / Hold
 3	 3	 Zoom	 Zoom / Size
 USB	 Shift + 8	 Prev	 I<< / Preset-
 4	 4	 Next	 >>I / Preset+
 5	 5	 Rev	 << / Tune-
 6	 6	 Fwd	 >> / Tune+
 Sub-T	 Subtitle / EQ	 Menu	 Menu / Home
 7	 7	 Up / CH+	 Up
 8	 8	 Up / CH+	 CH+ / Page+
 9	 9	 Exit/Recall	 Exit / Cancel / Clear





Original		Substituto		Original		Substituto	
	Exit/Recall		Back / Return				
	Left / Vol-		Left				
	Left / Vol-		Vol-				
	OK		OK				
	Right / Vol+		Vol+				
	Right / Vol+		Right				
	Down / CH-		CH- / Page-				
	Down / CH-		Down				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

