










 



 





 





 



 

 






Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	Home		Smart
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	i		Info
	:≡		Guide
	Settings		Options
	Settings		Menu
	Stop		Stop
	Rec		Rec
	Play/Pause		Play
			Play/Pause
			Pause

