 


 





Original	Substituto
	Power
	Mute
	P.Mode
	S.Mode
	FAV
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Mute / Dimmer
	Picture / Format
	Sound / Title
	Fav / Marker / PC
	Sleep / Timer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/-

Original	Substituto
	Back
	Vol+
	CH List
	CH+ / Page+
	Vol-
	Aspect
	CH- / Page-
	EPG
	Audio
	Rec
	Menu
	Up
	Exit
	Left
	Enter
	Right
	Source
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Shift + Picture / Format
	CH- / Page-
	Guide / EPG / -/-
	Audio / Lang I/II
	Rec / Rec Mode
	Menu / Home
	Up
	Exit / Cancel / Clear
	Left
	OK
	Right
	AV / Input / RDS





Original	Substituto	Original	Substituto
	Down		Hold
	Display		Subpage
	Red		Subtitle
	<<		Shift + Stop /
	Green		Eject / Surround
	>>		Subtitle / EQ
	Yellow		
	I<<		
	Blue		
	>>I		
	Text		
	Stop		
	Play		
	Pause		
	Index		
	Size		
	Reveal		
	Down		
	Display / Media		
	Red / Netflix / Search		
	<< / Tune-		
	Green / APP / Repeat		
	>> / Tune+		
	Yellow / YouTube / Repeat		
	I<< / Preset-		
	Blue / Prime Video / Random		
	>>I / Preset+		
	Text / Goto		
	Stop / Hold		
	Play / Slow		
	Pause / Step / Freeze		
	Info / Angle		
	Zoom / Size		
	D.Menu / Top		

