

 






 









 











 



 



 

 
 
 


 
 
 

 
 




 
 
 

 












Original	Substituto	Original	Substituto
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Freeze	 Shift + Media
 3	 3	 View Mode	 Media
 4	 4	 CH+	 Ch +
 5	 5	 CH-	 Ch -
 6	 6	 Surround	 Dual
 7	 7	 MPX	 Format
 8	 8	 Display	 Info
 9	 9	 Menu	 Menu
 0	 0	 Exit	 Exit
 Recall	 Pre Ch	 Return	 Back
 Input	 AV	 Up	 Up
 Tv	 TV/R	 Down	 Down
 PC	 Smart	 Right	 Right
 AV Mode	 3D	 Left	 Left

Original	Substituto	Original	Substituto
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Freeze	 Shift + Media
 3	 3	 View Mode	 Media
 4	 4	 CH+	 Ch +
 5	 5	 CH-	 Ch -
 6	 6	 Surround	 Dual
 7	 7	 MPX	 Format
 8	 8	 Display	 Info
 9	 9	 Menu	 Menu
 0	 0	 Exit	 Exit
 Recall	 Pre Ch	 Return	 Back
 Input	 AV	 Up	 Up
 Tv	 TV/R	 Down	 Down
 PC	 Smart	 Right	 Right
 AV Mode	 3D	 Left	 Left





Original		Substituto		Original	Substituto
	Enter		Ok		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	[≡]		Text		
	[...]		Subt		
	USB		Options		
	Stop		Stop		
	[≡♦]		List		
	[≡+]		Guide		
	<<		<<		
	>>		>>		
	[≡?]		D. Menu		
	[≡o]		Eject		
	Pause		Pause		
	Play		Play		

