


 





 


 






 





 


 
 
 
 
 
 
 
 







 
 

 


 
 


 
 
 
 
 
 
 












Original	Substituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Input	 AV
 Tv	 TV/R
 PC	 Smart
 AV Mode	 3D

Original	Substituto
 Sleep	 Sleep
 Vol+	 Vol +
 Vol-	 Vol -
 Freeze	 Shift + Media
 View Mode	 Media
 CH+	 Ch +
 CH-	 Ch -
 Surround	 Dual
 MPX	 Format
 Display	 Info
 Menu	 Menu
 Exit	 Exit
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Substituto	Original	Substituto
Enter	Ok		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
[≡]	Text		
[...]	Subt		
USB	Options		
Stop	Stop		
[≡♦]	List		
[≡+]	Guide		
<<	<<		
>>	>>		
[≡?]	D. Menu		
[≡o]	Eject		
Pause	Pause		
Play	Play		

