 

 

 

 
 
 

 
 
 

 
 
 

 

 
 
 

 
 
 
 
 

 
 
 


 
 
 


 
 
 

 
 




 
 




 

 

 

 


 


 
 




Original	Substituto	Original	Substituto
	Standby		Power
	MUTE		Mute
	SOURCE		AV
	P MODE		Media
	S Mode		Shift + Dual
	AUDIO I/II		Dual
	SLEEP		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	RECALL		Back
	MENU		Menu
	EXIT		Exit
	EPG		Guide
	DISPLAY		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	VOL-		Vol -
	VOL+		Vol +
	CH-		Ch -
	CH+		Ch +
	RED		Red
	GREEN		Green





Original		Substituto		Original		Substituto	
	YELLOW		Yellow				
	BLUE		Blue				
	TEXT		Text				
	HOLD	 +  Shift + Stop					
	TV/RADIO		TV/R				
	SUBTITLE		Subt				
	INDEX		Smart				
	ASPECT/SIZE		Format				
	<</REVEAL		<<				
	>>/SUBPAGE		>>				
	>>/SUBPAGE	 +  Shift + Subt					
	PLAY/PAUSE		Pause				
	PLAY/PAUSE		Play				
	STOP		Stop				
	I<<		I<<				
	>>I		>>I				

