

 




 
 




 
 


 

 






Original	Substituto	Original	Substituto
 TV/R	TV/R	 TV/Radio /	TV/Radio /
 POWER	POWER	 Power	Power
 MUTE	MUTE	 Mute / Dimmer	Mute / Dimmer
 SLEEP	SLEEP	 Sleep / Timer	Sleep / Timer
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 SUB	SUB	 Subtitle / EQ	Subtitle / EQ
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 EPG 2	EPG 2	 Shift + Guide / EPG / -/-	Shift + Guide / EPG / -/-
 EPG 1	EPG 1	 Guide / EPG / -/-	Guide / EPG / -/-
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 TXT	TXT	 Text / Goto	Text / Goto

Original	Substituto	Original	Substituto
 RECALL	RECALL	 Back / Return	Back / Return
 0	0	 0	0
 FAV 2	FAV 2	 Shift + Fav / Marker / PC	Shift + Fav / Marker / PC
 FAV 1	FAV 1	 Fav / Marker / PC	Fav / Marker / PC
 MENU	MENU	 Menu / Home	Menu / Home
 EXIT	EXIT	 Exit / Cancel / Clear	Exit / Cancel / Clear
 Up / CH +	Up / CH +	 Up	Up
 Left / VOL -	Left / VOL -	 Left	Left
 OK	OK	 OK	OK
 Right / VOL +	Right / VOL +	 Right	Right
 Down / CH -	Down / CH -	 Down	Down
 Red / Audio	Red / Audio	 Red / Netflix / Search	Red / Netflix / Search
 Red / Audio	Red / Audio	 Audio / Lang I/II	Audio / Lang I/II
 Blue / Info	Blue / Info	 Info / Angle	Info / Angle
 Blue / Info	Blue / Info	 Blue / Prime Video / Random	Blue / Prime Video / Random
 GREEN/PAUSE	GREEN/PAUSE	 Green / APP / Repeat	Green / APP / Repeat
 Yellow / Zoom	Yellow / Zoom	 Zoom / Size	Zoom / Size





Original	Substituto	Original	Substituto
 Yellow / Zoom	 Yellow / YouTube / Repeat		
 VOL+	 Vol+		
 Page+	 CH+ / Page+		
 VOL-	 Vol-		
 Page-	 CH- / Page-		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 PLAY	 Play / Slow		
 STOP	 Stop / Hold		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 PAUSE	 Pause / Step / Freeze		
 REC	 Rec / Rec Mode		

