

































 









 

















 
 






Original		Substituto		Original		Substituto	
	Power		Power		Vol-		Vol-
	Info		Info / Angle		CH+		CH+ / Page+
	Mute		Mute / Dimmer		CH-		CH- / Page-
	1		1		Guide		Guide / EPG / -/--
	2		2		Fav		Fav / Marker / PC
	3		3		Exit		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Left		Left
	6		6		Enter		OK
	7		7		Right		Right
	8		8		Down		Down
	9		9		Input		AV / Input / RDS
	0		0		Menu		Menu / Home
	MTS		Display / Media		Picture		Picture / Format
	C.C		Smart / List		Sound		Sound / Title
	Return		Back / Return		Sleep		Sleep / Timer
	Vol+		Vol+				

