





Original	Substituto	Original	Substituto
 Standby	 Power	 Vol+	 Vol+
 AQT/Auto/Open/CI	 Eject / Surround	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Mute	 Mute / Dimmer
 S.Mode	 Sound / Title	 Audio	 Audio / Lang I/II
 List/Angle	 Smart / List	 Sub-T	 Subtitle / EQ
 Aspect	 Setup / OPT /	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Info	 Info / Angle
 4	 4	 Input	 AV / Input / RDS
 5	 5	 DVD Setup/Exit	 Exit / Cancel / Clear
 6	 6	 Sleep	 Sleep / Timer
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Recall	 Back / Return	 OK	 OK








Original	Substituto
Rec	Rec / Rec Mode
Red/D.Prog/Tv/	Red / Netflix / Search
Green/Step	Green / APP / Repeat
Yellow/RPT	Yellow / YouTube / Repeat
Blue/A-B/SCR	Blue / Prime Video / Random
[=]/Slow	Text / Goto
[=▲]/Stop	Stop / Hold
[=▼]/Zoom	Zoom / Size
[=i]/I<<	I<< / Preset-
[=+]/Play/Pause	Play / Slow
[=>] />>I	>>I / Preset+
[=?]/<<<	<<< / Tune-
[=o]/>>>	>>> / Tune+
EPG/D.Menu	Guide / EPG / -/--
FAV/D.Title	Fav / Marker / PC
FAV+/D.Goto	Shift + CH+ /
FAV-/D.Disp	Shift + CH- /

Original	Substituto








 


 

 



















 

 



Original	Substituto	Original	Substituto
 Standby	 Power	 Vol+	 Vol+
 AQT/Auto/Open/CI	 Eject / Surround	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Mute	 Mute / Dimmer
 S.Mode	 Sound / Title	 Audio	 Audio / Lang I/II
 List/Angle	 Smart / List	 Sub-T	 Subtitle / EQ
 Aspect	 Setup / OPT /	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Info	 Info / Angle
 4	 4	 Input	 AV / Input / RDS
 5	 5	 DVD Setup/Exit	 Exit / Cancel / Clear
 6	 6	 Sleep	 Sleep / Timer
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Recall	 Back / Return	 OK	 OK





Original

Substituto

	Rec		Rec / Rec Mode
	Red/D.Prog/Tv/		Red / Netflix / Search
	Green/Step		Green / APP / Repeat
	Yellow/RPT		Yellow / YouTube / Repeat
	Blue/A-B/SCR		Blue / Prime Video / Random
	[=]/Slow		Text / Goto
	[=▲]/Stop		Stop / Hold
	[=▼]/Zoom		Zoom / Size
	[=i]/I<<		I<< / Preset-
	[+]/Play/Pause		Play / Slow
	[◆]/>>I		>>I / Preset+
	[=?]/<<		<< / Tune-
	[=o]/>>		>> / Tune+
	EPG/D.Menu		Guide / EPG / -/-
	FAV/D.Title		Fav / Marker / PC
	FAV+/D.Goto		Shift + CH+ /
	FAV-/D.Disp		Shift + CH- /

Original

Substituto

