



 

 

 

 

 

 

 






















 

















Original	Substituto	Original	Substituto
 Power	Power	 Power	Power
 Reset	Reset	 Guide / EPG / -/--	Guide / EPG / -/--
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 Mute	Mute	 Mute / Dimmer	Mute / Dimmer
 Shift	Shift	 Smart / List	Smart / List
 Interval	Interval	 Display / Media	Display / Media
 Clock	Clock	 Fav / Marker / PC	Fav / Marker / PC
 Up	Up	 Up	Up

Original	Substituto	Original	Substituto
 Left	Left	 Left	Left
 Enter	Enter	 OK	OK
 Right	Right	 Right	Right
 Down	Down	 Down	Down
 Exit	Exit	 Exit / Cancel / Clear	Exit / Cancel / Clear
 Edit	Edit	 Back / Return	Back / Return
 F1	F1	 Sound / Title	Sound / Title
 F2	F2	 Audio / Lang I/II	Audio / Lang I/II
 F3	F3	 Subtitle / EQ	Subtitle / EQ
 F4	F4	 Eject / Surround	Eject / Surround
 F5	F5	 Picture / Format	Picture / Format
 F6	F6	 Zoom / Size	Zoom / Size
 F7	F7	 Sleep / Timer	Sleep / Timer
 F8	F8	 TV/Radio /	TV/Radio /
 F9	F9	 D.Menu / Top	D.Menu / Top
 F10	F10	 Setup / OPT /	Setup / OPT /
 F11	F11	 Text / Goto	Text / Goto

