 
 

 

 
 



 



 




 

 

 




 






 
















 
































 







Original	Substituto	Original	Substituto
 Power	 Power	 Tv/DVD	 TV/Radio /
 Open/Close	 Eject / Surround	 Top Menu	 D.Menu / Top
 1	 1	 Menu	 Menu / Home
 2	 2	 Chapter Mark	 Yellow / YouTube / Repeat
 3	 3	 Chapter Erase	 Blue / Prime Video / Random
 4	 4	 System Menu	 Shift + Menu /
 5	 5	 Title List	 Red / Netflix / Search
 6	 6	 Timer	 Sleep / Timer
 7	 7	 Display	 Display / Media
 8	 8	 Timer List	 Green / APP / Repeat
 9	 9	 Return	 Back / Return
 0	 0	 Options	 Setup / OPT /
 Prog+	 CH+ / Page+	 Up	 Up
 Prog-	 CH- / Page-	 Down	 Down
 Input Select	 AV / Input / RDS	 Right	 Right
 Audio	 Audio / Lang I/II	 Left	 Left
 Subtitle	 Subtitle / EQ	 Enter	 OK

Original	Substituto	Original	Substituto
 Tv/DVD	 TV/Radio /	 TV	 DVD
 Top Menu	 D.Menu / Top	 SAT	 AUX
 Menu	 Menu / Home	 SLOW	 STEP-FREEZE
 Chapter Mark	 Yellow / YouTube / Repeat	 HOLD	 REC MODE
 Chapter Erase	 Blue / Prime Video / Random	 TUNE-	 TUNE+
 System Menu	 Shift + Menu /	 PRESET-	 PRESET+
 Title List	 Red / Netflix / Search	 TITLE	 LANG I/II
 Timer	 Sleep / Timer	 EQ	 SURROUND
 Display	 Display / Media	 SOUND	 AUDIO
 Timer List	 Green / APP / Repeat	 SUBTITLE	 TIMER
 Return	 Back / Return	 FORMAT	 SIZE
 Options	 Setup / OPT /	 PICTURE	 ZOOM
 Up	 Up	 TOP MENU	 OPT-TOOLS
 Down	 Down	 D.MENU	 SETUP
 Right	 Right	 GOTO	 TEXT
 Left	 Left	 RDS	 AV INPUT
 Enter	 OK	 HOME	 ANGLE
		 MENU	 INFO
		 CLEAR	 EXIT
		 CANCEL	 RETURN
		 LIST	 SMART
		 MEDIA	 DISPLAY
		 TV	 DVD
		 CD - STB	 CH PAGE
		 VIDEO	 TAPE
		 TUNER	 AUX - HDD
		 USB	 BLUETOOTH
		 HDMI - BAT	 PC
		 GUIDE EPG	 FAV MARKER
		 NETFLIX	 APP
		 YouTube	 Prime Video
		 SEARCH	 REPEAT
		 REPEAT A-B	 RANDOM



