














 









 

 







Original	Substituto	Original	Substituto
 Power	 Power	 Forward	 >> / Tune+
 Open/Close	 Eject / Surround	 Skip I<<	 I<< / Preset-
 1	 1	 Skip >>I	 >>I / Preset+
 2	 2	 Pause/Step	 Pause / Step / Freeze
 3	 3	 Play	 Play / Slow
 4	 4	 Stop	 Stop / Hold
 5	 5	 Display / CLK/CNT	 Display / Media
 6	 6	 Up/+ PR/TRK	 CH+ / Page+
 7	 7	 Up/+ PR/TRK	 Up
 8	 8	 i/Setup	 Setup / OPT /
 9	 9	 Left	 Left
 Vol+ TV	 Vol+	 OK/Enter	 OK
 TV/VCR	 Smart / List	 Right	 Right
 0	 0	 Disc Menu	 D.Menu / Top
 AV	 AV / Input / RDS	 Down/- PR/TRK	 CH- / Page-
 Vol- TV	 Vol-	 Down/- PR/TRK	 Down
 Backward	 << / Tune-	 Return	 Back / Return





Original	Substituto
 Power VCR	 Power
 Eject VCR	 Eject / Surround
 1 VCR	 1
 2 VCR	 2
 3 VCR	 3
 4 VCR	 4
 5 VCR	 5
 6 VCR	 6
 7 VCR	 7
 8 VCR	 8
 9 VCR	 9
 Vol+ TV	 Vol+
 0 VCR	 0
 Vol- TV	 Vol-
 << Backward	 << / Tune-
 >> Forward	 >> / Tune+
 Pause/Step VCR	 Pause / Step / Freeze

Original	Substituto
 Play VCR	 Play / Slow
 Stop VCR	 Stop / Hold
 Display VCR	 Display / Media
 i/Setup VCR	 Setup / OPT /
 O)/Audio VCR	 Audio / Lang I/II
 Rec/ITR	 Rec / Rec Mode
 Search VCR	 Red / Netflix / Search
 Clear VCR	 Exit / Cancel / Clear
 Repeat VCR	 Green / APP / Repeat
 A-B/LP VCR	 Yellow / YouTube / Repeat
 Random/CM Skip	 Blue / Prime Video / Random



