






 



 







 




 

 



 














 






 






 














 





 

 
 


Original	Substituto	Original	Substituto
 Power	 Power	 Home	 Shift + Menu /
 Source	 AV / Input / RDS	 P+	 CH+ / Page+
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 i	 Info / Angle
 4	 4	 Back	 Back / Return
 5	 5	 Mouse	 Display / Media
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 OK
 EPG	 Guide / EPG / - / -	 Netflix	 Shift + Red / Netflix /
 Vol +	 Vol +	 YouTube	 Shift + Yellow / YouTube /
 Vol -	 Vol -	 prime video	 Shift + Blue / Prime
 Mute	 Mute / Dimmer	 f	 Smart / List
 APPS	 Shift + Green / APP / Repeat	 Red	 Red / Netflix / Search

Original	Substituto	Original	Substituto
 Home	 Shift + Menu /	 TV	 DVD
 P+	 CH+ / Page+	 SAT	 AUX
 P-	 CH- / Page-	 SLOW	 STEP-FREEZE
 Menu	 Menu / Home	 HOLD	 REC MODE
 i	 Info / Angle	 TUNE-	 TUNE+
 Back	 Back / Return	 PRESET-	 PRESET+
 Mouse	 Display / Media	 EQ	 SURROUND
 Up	 Up	 TITLE	 LANG
 Down	 Down	 AUDIO	 SUBTITLE
 Right	 Right	 SIZE	 TIMER
 Left	 Left	 PICTURE	 ZOOM
 OK	 OK	 SLEEP	 PROGRAM
 Netflix	 Shift + Red / Netflix /	 TOP MENU	 OPT-TOOLS
 YouTube	 Shift + Yellow / YouTube /	 GOTO	 RDS
 prime video	 Shift + Blue / Prime	 D.MENU	 SETUP
 f	 Smart / List	 TEXT	 AV INPUT
 Red	 Red / Netflix / Search	 HOME	 ANGLE





Original	Substituto	Original	Substituto
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Text		Text / Goto
	Rec		Rec / Rec Mode
	l <<		l << / Preset-
	>> l		>> l / Preset+
	MTS		Fav / Marker / PC
	Sub		Subtitle / EQ

