 

 

 







 

 



 

 

 

 





 



















 





 



 

 





 


 


 

 







 


 












Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	Right/Vol+		Right
	Left/Vol-		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Recall		Back / Return
	Enter		Shift + OK
	Tv		TV/Radio /
	Scart		>> / Tune+
	AV		AV / Input / RDS
	PC		Fav / Marker / PC
	Sleep		Sleep / Timer
	Freeze		Pause / Step / Freeze
	Wide		Picture / Format
	Display		Display / Media
	Menu		Menu / Home
	e		Info / Angle
	MPX		Exit / Cancel / Clear
	PIP/PBP		D.Menu / Top
	Up CH		Up
	Down CH		Down
	Vol-		Vol-
	Vol+		Vol+





Original	Substituto	Original	Substituto
	OK		OK
	Swap		Play / Slow
	Active	 + 	Shift + TV/Radio / Program
	Position		Sound / Title
	Size/Mode		Setup / OPT /
	Index	 + 	Shift + Info / Angle
	Subtitle		Subtitle / EQ
	Reveal		<< / Tune-
	Teletext		Text / Goto
	Size		Zoom / Size
	Mix	 + 	Shift + Text /
	Subpage	 + 	Shift + Subtitle / EQ
	Hold		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Substituto

