

 







 



 

 

 

 

















Original	Substituto	Original	Substituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text / Goto
	PRE-CH		Back / Return
	Mute		Mute / Dimmer
	CH List		Shift + Smart / List
	Vol+		Vol+

Original	Substituto	Original	Substituto
	Vol-		Vol-
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Menu		Menu / Home
	Smart HUB		Smart / List
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Info		Info / Angle
	Return		Shift + Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





	Original	Substituto	Original	Substituto
	C	Yellow	YouTube	Yellow / YouTube / Repeat
	D	Blue	Prime Video	Blue / Prime Video / Random
	E-MANUAL	E-Manual	PROGRAM TV/RADIO	TV/Radio /
	3D	3D	SIZE ZOOM	Zoom / Size
	AD/SUBT.	AD/Subt.	EQ SUBTITLE	Subtitle / EQ
	Stop	Stop	HOLD	Stop / Hold
	<</I<<	<</I<<	TUNE-	<< / Tune-
	Play	Play	SLOW	Play / Slow
	Pause	Pause	STEP - FREEZE	Pause / Step / Freeze
	>>/>>I	>>/>>I	TUNE+	>> / Tune+

