





 








Original	Substituto
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >10	 Guide / EPG / -/--
 Clock/Timer	 Shift + Sleep / Timer
 Set/Resume	 Menu / Home
 Cancel	 Exit / Cancel / Clear
 Display	 Display / Media
MP3 Mode	Picture / Format

Original	Substituto
 Preset Up	 >>  / Preset+
 Preset Down	  << / Preset-
 >>/>>	 >> / Tune+
  <</<<	 << / Tune-
 Stop	 Stop / Hold
 Play/Pause CD	 Play / Slow
 FM/AM	 Fav / Marker / PC
 Play/Pause USB Memory	 Pause / Step / Freeze
 AUX	 AV / Input / RDS
 TA/News/Info	 Info / Angle
 Display Mode	 Setup / OPT /
 PTY Search	 Red / Netflix / Search
 PTY+	 CH+ / Page+
 PTY-	 CH- / Page-
 QP Link	 Smart / List
 FM Mode	 TV/Radio /
Repeat	Green / APP / Repeat





Original	Substituto	Original	Substituto
	Program	+	Shift + TV/Radio / Program
	Random		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	A.Standby		D.Menu / Top
	Dimmer	+	Shift + Mute / Dimmer
	Sound Turbo		Sound / Title
	AHB Pro		Subtitle / EQ
	Bass/Treble		Audio / Lang I/II
	Vol+		Vol+
	Vol-		Vol-
	Fade Muting		Mute / Dimmer

Original	Substituto

