 











 





 




 
 



 

 

 

 
 
 

 




 
 





 







 

 











Original	Substituto	Original	Substituto
 Power	 Power	 8	 8
 Mute	 Mute / Dimmer	 9	 9
 []/[+]	 TV/Radio /	 0	 0
 Input	 AV / Input / RDS	 +/-	 Guide / EPG / +/-
 [=]	 Text / Goto	 C	 Fav / Marker / PC
 [X]/[o]	 Zoom / Size	 Red	 Red / Netflix / Search
 [◆]	 Picture / Format	 Green	 Green / APP / Repeat
 [?]/[i+]	 Subtitle / EQ	 Yellow	 Yellow / YouTube / Repeat
 ↔	 Smart / List	 Blue	 Blue / Prime Video / Random
 []/[=i]	 Display / Media	 MENU	 Menu / Home
 1	 1	 +	 Up
 2	 2	 -	 Down
 3	 3	 →←	 OK
 4	 4	 +	 Vol+
 5	 5	 -	 Vol-
 6	 6	 [L] +	 + CH PAGE
 7	 7	 [R] -	 - CH PAGE






















Original	Substituto	Original	Substituto
 Power VTR1	 Shift + Power		
 >> VTR1	 >> / Tune+		
 Play VTR1	 Play / Slow		
 << VTR1	 << / Tune-		
 Stop VTR1	 Stop / Hold		
 Pause VTR1	 Pause / Step / Freeze		
 Rec VTR1	 Rec / Rec Mode		
 Progr+ VTR1	 Shift + CH+ /		
 Progr- VTR1	 Shift + CH- /		









Original	Substituto	Original	Substituto
	Power VTR2		Power
	Progr+ VTR2		CH+ / Page+
	Progr- VTR2		CH- / Page-
	Play VTR2		Play / Slow
	>> VTR2		>> / Tune+
	<< VTR2		<< / Tune-
	Stop VTR2		Stop / Hold
	Pause VTR2		Pause / Step / Freeze
	Rec VTR2		Rec / Rec Mode





















Original		Substituto		Original		Substituto	
	Power VTR3		Power				
	Play VTR3		Play / Slow				
	>> VTR3		>> / Tune+				
	<< VTR3		<< / Tune-				
	Stop VTR3		Stop / Hold				
	Pause VTR3		Pause / Step / Freeze				
	Prog+ VTR3		CH+ / Page+				
	Prog- VTR3		CH- / Page-				
	Rec VTR3		Rec / Rec Mode				





Original	Substituto	Original	Substituto
 Power MDP	 Power		
 Play MDP	 Play / Slow		
 >> MDP	 >> / Tune+		
 << MDP	 << / Tune-		
 Stop MDP	 Stop / Hold		
 Pause MDP	 Pause / Step / Freeze		
 Progr+ MDP	 CH+ / Page+		
 Progr- MDP	 CH- / Page-		

