






















| Original                                                                                         | Substituto                                                                                         |
|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
|  Power          |  Power            |
|  ambilight      |  Display / Media  |
|  Info           |  Info / Angle     |
|  Pair / Sources |  AV / Input / RDS |
|  Up             |  Up               |
|  Left           |  Left             |
|  OK             |  OK               |
|  Right          |  Right            |
|  Down           |  Down             |
|  Back           |  Back / Return    |
|  Home          |  Menu / Home     |
|  Settings     |  Setup / OPT /  |
|  <<<          |  <<< / Tune-    |
|  <<<          |  I<<< / Preset- |
|  Play         |  Play / Slow    |
|  >>>          |  >>> / Tune+    |
|  >>>          |  >>>I / Preset+ |

| Original                                                                                         | Substituto                                                                                                      |
|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
|  Stop         |  Stop / Hold                 |
|  Pause        |  Pause / Step / Freeze       |
|  Rec          |  Rec / Rec Mode              |
|  Red          |  Red / Netflix / Search      |
|  Green        |  Green / APP / Repeat        |
|  Yellow       |  Yellow / YouTube / Repeat   |
|  Blue         |  Blue / Prime Video / Random |
|  Vol+         |  Vol+                        |
|  Mute         |  Mute / Dimmer               |
|  Vol-         |  Vol-                        |
|  Netflix     |  Shift + Red / Netflix /    |
|  ::         |  Smart / List              |
|  PR+        |  CH+ / Page+               |
|  TV Exit    |  Exit / Cancel / Clear     |
|  PR-        |  CH- / Page-               |
|  Rakuten TV |  Shift + 2                 |
|  1          |  1                         |





| Original | Substituto |
|----------|------------|
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |

| Original | Substituto |
|----------|------------|
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |
|          |            |

