



Original	Substituto	Original	Substituto
Power	Power	P+	>>  / Preset+
Mute	Mute / Dimmer	P-	Shift + CH- /
1	1	P-	I<< / Preset-
2	2	Up	Up
3	3	Down	Down
4	4	Right	Right
5	5	Left	Left
6	6	Up	CH+ / Page+
7	7	Down	CH- / Page-
8	8	OK	OK
9	9	Right	Vol+
0	0	Fav	Fav / Marker / PC
TV	TV/Radio /	Left	Vol-
Radio	Shift + TV/Radio / Program	Info	Info / Angle
Menu	Menu / Home	Lang / Red	Red / Netflix / Search
Exit	Exit / Cancel / Clear	Lang / Red	Audio / Lang I/II
P+	Shift + CH+ / Page+	Pause / Blue	Blue / Prime Video / Random

Page+

Original	Substituto	Original	Substituto
P+	>>  / Preset+	TV	DVD
P-	Shift + CH- /	SAT	AUX
P-	I<< / Preset-	SLOW	STEP-FREEZE
Up	Up	HOLD	REC MODE
Down	Down	TUNE-	TUNE+
Right	Right	PRESET-	PRESET+
Left	Left	TITLE	LANG I/II
Up	CH+ / Page+	EQ	SURROUND
Down	CH- / Page-	SOUND	AUDIO
OK	OK	SUBTITLE	TIMER
Right	Vol+	PICTURE	ZOOM
Fav	Fav / Marker / PC	FORMAT	SLEEP
Left	Vol-	TOP MENU	OPT-TOOLS
Info	Info / Angle	GOTO	RDS
Lang / Red	Red / Netflix / Search	D.MENU	SETUP
Lang / Red	Audio / Lang I/II	TEXT	AV INPUT
Pause / Blue	Blue / Prime Video / Random	HOME	ANGLE





**Original**

**Substituto**

	Pause / Blue		Pause / Step / Freeze
	Sound / Green		Green / APP / Repeat
	Sound / Green		Sound / Title
	Text / Yellow		Yellow / YouTube / Repeat
	Text / Yellow		Text / Goto
	SAT		Shift +
	SAT		Smart / List
	Recall		Back / Return
	TV / SAT		Display / Media
	EPG		Guide / EPG / -/--

**Original**

**Substituto**


