
























 












Original	Substituto	Original	Substituto
 ON/OFF	On/Off	 Power	Power
 MUTE	Mute	 Mute / Dimmer	Mute / Dimmer
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 Tv Guide	Tv Guide	 Guide / EPG / -/--	Guide / EPG / -/--
 Recall	Recall	 Shift + Back / Return	Shift + Back / Return
 Picture	Picture	 Picture / Format	Picture / Format
 Sound	Sound	 Sound / Title	Sound / Title
 Source	Source	 AV / Input / RDS	AV / Input / RDS

Original	Substituto	Original	Substituto
 Vol+	Vol+	 Vol+	Vol+
 Vol-	Vol-	 Vol-	Vol-
 CH+	CH+	 CH+ / Page+	CH+ / Page+
 CH-	CH-	 CH- / Page-	CH- / Page-
 Menu	Menu	 Menu / Home	Menu / Home
 Exit	Exit	 Exit / Cancel / Clear	Exit / Cancel / Clear
 Back	Back	 Back / Return	Back / Return
 FAV	FAV	 Fav / Marker / PC	Fav / Marker / PC
 Up	Up	 Up	Up
 Down	Down	 Down	Down
 Left	Left	 Left	Left
 Right	Right	 Right	Right
 OK	OK	 OK	OK
 Info	Info	 Info / Angle	Info / Angle
 Text	Text	 Text / Goto	Text / Goto
 Subtitle	Subtitle	 Subtitle / EQ	Subtitle / EQ
 TV	TV	 TV/Radio /	TV/Radio /



