






















 



 


























 

 















Original	Substituto	Original	Substituto
 PWR	 Power	 A/V+	 Green / APP / Repeat
 TV/Rad	 TV/Radio /	 A/V+	 AV / Input / RDS
 TV/STB	 Display / Media	 Yellow / FAV	 Yellow / YouTube / Repeat
 1	 1	 FAV	 Fav / Marker / PC
 2	 2	 Blue / A-Z	 Blue / Prime Video / Random
 3	 3	 Blue / A-Z	 Shift + Blue / Prime
 4	 4	 Menu	 Menu / Home
 5	 5	 EPG	 Guide / EPG / -/-
 6	 6	 Info	 Info / Angle
 7	 7	 Up	 Up
 8	 8	 Left	 Left
 9	 9	 OK	 OK
 Back	 Back / Return	 Right	 Right
 0	 0	 Down	 Down
 Mute	 Mute / Dimmer	 Vol+	 Vol+
 Red	 Red / Netflix / Search	 Exit	 Exit / Cancel / Clear
 OPT	 Setup / OPT /	 PR/CH+	 CH+ / Page+




















Original	Substituto	Original	Substituto
 Green	 Green / APP / Repeat	 A/V+	 AV / Input / RDS
 A/V+	 AV / Input / RDS	 Yellow / FAV	 Yellow / YouTube / Repeat
 Yellow / FAV	 Yellow / YouTube / Repeat	 FAV	 Fav / Marker / PC
 FAV	 Fav / Marker / PC	 Blue / A-Z	 Blue / Prime Video / Random
 Blue / A-Z	 Blue / Prime Video / Random	 Blue / A-Z	 Shift + Blue / Prime
 Menu	 Menu / Home	 EPG	 Guide / EPG / -/-
 EPG	 Guide / EPG / -/-	 Info	 Info / Angle
 Info	 Info / Angle	 Up	 Up
 Up	 Up	 Left	 Left
 Left	 Left	OK	OK
OK	OK	Right	Right
Right	Right	Down	Down
Down	Down	Vol+	Vol+
Vol+	Vol+	Exit	Exit / Cancel / Clear
Exit	Exit / Cancel / Clear	PR/CH+	CH+ / Page+
PR/CH+	CH+ / Page+		









 

 







 



























Original	Substituto	
PWR On/Off		Power
East		D.Menu / Top
TV	 +  Shift + 1	
Dec/Pause		Pause / Step / Freeze
Alt/16:9		Picture / Format
H/V Play		Play / Slow
Opt?		Setup / OPT /
FAV Pref.		Fav / Marker / PC
4ghi		4
Guide Pilote	 +  Shift + Guide / EPG / -/-	
9wxyz		9
8tuv		8
7pqrm		7
6mno		6
3def		3
5jkl		5
2abc		2

Original	Substituto	
1. ?		1
Yellow	 REPEAT A-B	Yellow / YouTube / Repeat
LNB F.Forward		>> / Tune+
Lang./Rewind		<< / Tune-
TV/SAT		AV / Input / RDS
West		>>I / Preset+
Dev		I<<< / Preset-
0/10		0
Video	 +  Shift + 4	
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Blue		Blue / Prime Video / Random
Freeze	 +  Shift + Pause / Step /	
Menu Up		Up
Mute		Mute / Dimmer
Epg		Guide / EPG / -/-
App	 +  Shift + Green / APP / Repeat	





Original	Substituto	
Info		Info / Angle
Subt.List		Subtitle / EQ
Sleep Timer		Sleep / Timer
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
Audio		Audio / Lang I/II

Original	Substituto	
CH/Page-		CH- / Page-

