
















Original	Substituto	Original	Substituto
Lang./Rewind	<< / Tune-	FAV Pref.	Fav / Marker / PC
Lang./Rewind	+ Shift + Audio / Lang I/II	Red	Red / Netflix / Search
0/10	0	Green	Green / APP / Repeat
TV/SAT	+ Shift + 0	Yellow	Yellow / YouTube / Repeat
TV	+ Shift + 1	Blue	Blue / Prime Video / Random
Audio	Audio / Lang I/II	Freeze	+ Shift + Pause / Step /
CH/Page-	CH- / Page-	Dec/Pause	Pause / Step / Freeze
1. ?	1	East	Rec / Rec Mode
2abc	2	H/V Play	Play / Slow
3def	3	LNB F.Forward	>> / Tune+
4ghi	4	Mute	Mute / Dimmer
5jkl	5	Epg	Guide / EPG / -/--
6mno	6	Opt?	Setup / OPT /
7pqrm	7	App	+ Shift + Green / APP /
8tuv	8	Info	Info / Angle
9wxyz	9	Subt.List	Subtitle / EQ
Volume-	Vol-	Sleep Timer	Sleep / Timer



Original	Substituto	Original	Substituto
Video	 +  Shift + 4		
Text	 Text / Goto		
Zoom	 Zoom / Size		
PWR On/Off	 Power		
Menu	 Menu / Home		
Menu Up	 Up		
Display	 Display / Media		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Exit	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
CH/Page+	 CH+ / Page+		

