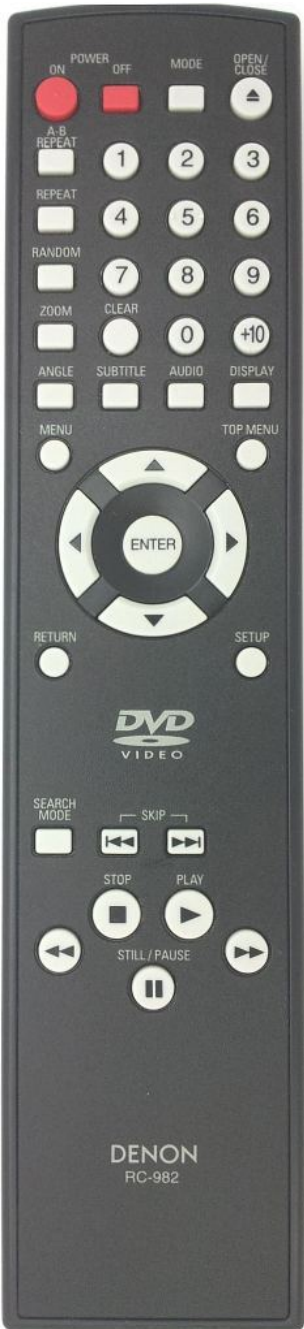 
 

 













Original	Substituto
Power On	Power
Power Off	Shift + Power
Mode	Picture / Format
Open/Close	Eject / Surround
A-B Repeat	Yellow / YouTube / Repeat
Repeat	Green / APP / Repeat
Random	Blue / Prime Video / Random
Zoom	Zoom / Size
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Display	Display / Media
Clear	Exit / Cancel / Clear
1	1
2	2
3	3
4	4

Original	Substituto
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/-
Menu	Menu / Home
Top Menu	D.Menu / Top
Return	Back / Return
Setup	Setup / OPT /
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Search Mode	Red / Netflix / Search





	Original	Substituto	Original	Substituto
	I<< Skip	 I<< / Preset-		
	Skip >>I	 >>I / Preset+		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Stop	 Stop / Hold		
	Play	 Play / Slow		
	Still/Pause	 Pause / Step / Freeze		

