

























 












Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide / EPG / -/--
	Rec		Rec / Rec Mode
	Info		Info / Angle
	Vol+		Vol+
	Vol-		Vol-

Original	Substituto	Original	Substituto
	CH+		CH+ / Page+
	CH-		CH- / Page-
	≡		D.Menu / Top
	Input		AV / Input / RDS
	Smart Colors		Display / Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Home		Menu / Home
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Original	Substituto	Original	Substituto
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Subt		Subtitle / EQ
	Audio		Audio / Lang I/II
	TXT		Text / Goto
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Google Play		Shift + Green / APP /

Original	Substituto

