










Original	Substituto	Original	Substituto
 Power	 Power	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 >>	 >> / Tune+
 Red	 Red / Netflix / Search	 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat	 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat	 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random	 >>I	 >>I / Preset+
 Fav	 Fav / Marker / PC	 Source	 AV / Input / RDS
 Guide	 Guide / EPG / -/--	 Up	 Up
 Index	 Info / Angle	 Display	 Display / Media
 Size	 Zoom / Size	 Left	 Left
 Text	 Text / Goto	 OK	 OK
 Hold	 Shift + Stop /	 Right	 Right
 TV/Radio	 TV/Radio /	 TV Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Subpage	 Shift + Subtitle / EQ	 Exit	 Exit / Cancel / Clear
 Play / Pause	 Play / Slow	 Vol+	 Vol+
 Play / Pause	 Pause / Step / Freeze	 Aspect	 Shift + Picture / Format

Original	Substituto	Original	Substituto
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP-FREEZE	 SAT	 AUX
 HOLD	 HOLD	 REC MODE	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 LANG UI	 EQ	 SURROUND	 SURROUND
 AUDIO	 SUBTITLE	 PROGRAM	 PROGRAM
 SIZE	 SLEEP	 TV RADIO	 TV RADIO
 ZOOM	 TIMER	 RDS	 RDS
 OPT-TOOLS	 GOTO	 AV INPUT	 AV INPUT
 SETUP	 TEXT	 HOME	 ANGLE
 OK	 OK	 MENU	 INFO
 CLEAR	 RETURN	 EXIT	 BACK
 CANCEL	 LIST	 +	 +
 VOL	 SMART	 -	 -
 TV	 MEDIA	 1	 CD-STB
 1	 DISPLAY	 2	 TUNER
 2	 TV	 3	 TAPE
 3	 DVD	 4	 BLUETOOTH
 4	 HDMI-BAT	5	PC
5	GUIDE EPG	6	FAV MARKER
6	NETFLIX	7	NETFLIX
7	APP	8	APP
8	YouTube	9	YouTube
9	Prime Video	0	Prime Video
0	SEARCH	SLEEP	SEARCH
SLEEP	REPEAT	P-MODE	REPEAT
P-MODE	REPEAT A-B	S-MODE	REPEAT A-B
S-MODE	RANDOM	MUTE	RANDOM
MUTE	Mandis SHOP	POWER	Mandis SHOP
POWER	www.mandis.tv	MUTE	www.mandis.tv
MUTE		MUTE	



