

 















 



 



 



 



 



 



 
 


 



 



 



 

















Original	Substituto	Original	Substituto
 Power	 Power	 Green/*	 Green / APP / Repeat
 [↔]/[/]	 Picture / Format	 Yellow	 Yellow / YouTube / Repeat
 [*]/[]	 Zoom / Size	 Blue/[+]	 Blue / Prime Video / Random
 Source/[+]	 AV / Input / RDS	 []	 Subtitle / EQ
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Up	 Up
 3	 3	 [=]	 Text / Goto
 4	 4	 <<	 << / Tune-
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Play	 Play / Slow
 8	 8	 Right	 Right
 9	 9	 >>	 >> / Tune+
 [i+]/[?]	 Info / Angle	 Down	 Down
 0	 0	 Stop	 Stop / Hold
 -/--/Recall	 Guide / EPG / -/--	 Menu	 Menu / Home
 Red/♪	 Red / Netflix / Search	 Vol+	 Vol+

Original	Substituto	Original	Substituto
 Green/*	 Green / APP / Repeat	 Yellow	 Yellow / YouTube / Repeat
 Blue/[+]	 Blue / Prime Video / Random	 []	 Subtitle / EQ
 Pause	 Pause / Step / Freeze	 Up	 Up
 [=]	 Text / Goto	 <<	 << / Tune-
 Left	 Left	 OK	 OK
 Play	 Play / Slow	 Right	 Right
 >>	 >> / Tune+	 Down	 Down
 Stop	 Stop / Hold	 Menu	 Menu / Home
 Vol+	 Vol+		





 



 

 

 

 

 



 




Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-





	Original	Substituto	Original	Substituto
	Power			
	Up			
	Pause			
	Left			
	<<			
	OK			
	Play			
	Right			
	>>			
	Stop			
	Down	