









































 



Original	Substituto
 Power	 Power
 [↔]/[/]	 Picture / Format
 [*]/[II]	 Zoom / Size
 Source/[+]	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [i+]/[?]	 Info / Angle
 0	 0
 -/--/Recall	 Guide / EPG / -/--
 Red/♪	 Red / Netflix / Search

Original	Substituto
 Green/*	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/[+]	 Blue / Prime Video / Random
 []	 Subtitle / EQ
 Pause	 Pause / Step / Freeze
 Up	 Up
 [=]	 Text / Goto
 <<	 << / Tune-
 Left	 Left
 OK	 OK
 Play	 Play / Slow
 Right	 Right
 >>	 >> / Tune+
 Down	 Down
 Stop	 Stop / Hold
 Menu	 Menu / Home
 Vol+	 Vol+







 



 

 

 

 

 



 



Original	Substituto
 Mute	 Mute / Dimmer
 Prog+	 CH+ / Page+
 Vol-	 Vol-
 Prog-	 CH- / Page-

Original	Substituto







 



 



 



 











 









 



 



 





Original	Substituto	Original	Substituto
 Power	 Power		
 Up	 Up		
 Pause	 Pause / Step / Freeze		
 Left	 Left		
 <<	 << / Tune-		
 OK	 OK		
 Play	 Play / Slow		
 Right	 Right		
 >>	 >> / Tune+		
 Stop	 Stop / Hold		
 Down	 Down		





Original	Substituto	Original	Substituto
 Power	 Power	 Down	 Down
 1	 1	 Right	 Right
 2	 2	 >>	 >> / Tune+
 3	 3	 <<	 << / Tune-
 4	 4	 Left	 Left
 5	 5	 Rec	 Rec / Rec Mode
 6	 6	 Prog+	 CH+ / Page+
 7	 7	 Prog-	 CH- / Page-
 8	 8		
 9	 9		
 0	 0		
 -/--/Recall	 Guide / EPG / -/--		
 OK	 OK		
 Play	 Play / Slow		
 Up	 Up		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		

