



 











Original	Substituto	Original	Substituto
Standby / On	Power	Next / Fwd	>> / Tune+
Title	Sound / Title	Next / Fwd	>> / Preset+
Menu	Menu / Home	0	0
Open / Close	Eject / Surround	Clear	Exit / Cancel / Clear
OSD / Setup	Setup / OPT /	Search	Red / Netflix / Search
1	1	Pause / Step	Pause / Step / Freeze
2	2	Up	Up
3	3	Play	Play / Slow
Slow Fwd	Shift + Play /	Left	Left
4	4	Enter	OK
5	5	Right	Right
6	6	Stop	Stop / Hold
Prev / Rev	<< / Tune-	Down	Down
Prev / Rev	<< / Preset-	Return	Back / Return
7	7	Play Mode	Display / Media
8	8	A-B	Yellow / YouTube / Repeat
9	9	Memory	Fav / Marker / PC





Original	Substituto	Original	Substituto
 Timer	 Sleep / Timer		
 Equalizer	 +  Shift + Subtitle / EQ		
 Vol / CH	 Smart / List		
empty left	 CH- / Page-		
empty right	 CH+ / Page+		
 Zoom	 Zoom / Size		
 Angle	 Info / Angle		
 Subtitle	 Subtitle / EQ		
 Audio	 Audio / Lang I/II		

