











 





 































Original	Substituto	Original	Substituto
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Left	 Left
 1	 1	 Enter	 OK
 2	 2	 Right	 Right
 3	 3	 Exit	 Exit / Cancel / Clear
 Nicam	 Shift + Audio / Lang I/II	 Down	 Down
 4	 4	 Display	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 Sound	 Sound / Title
 Recall/Goto	 Back / Return	 CH+	 CH+ / Page+
 Recall/Goto	 Shift + Text /	 Vol-	 Vol-
 7	 7	 Pic	 Picture / Format
 8	 8	 CH-	 CH- / Page-
 9	 9	 Sleep	 Sleep / Timer
 0	 0	 Aspect	 Shift + Picture / Format
 TV Menu	 Menu / Home	 DVD/DVB Setup	 Setup / OPT /
 Up	 Up	 DVD Source	 Shift + AV / Input / RDS

Original	Substituto	Original	Substituto
 Power	 Mute / Dimmer	 Shift	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	 BACK
 CLEAR	 EXIT	 CANCEL	
 LIST	 SMART	 MEDIA	 CH PAGE
 VOL +	 DISPLAY	 TV	 DVD
 VOL -	 CH	 CD - STB	 VIDEO
 TV	 1	 2	 TAPE
 DVD	 4	 5	 TUNER
 CD - STB	 7	 8	 AUX - HDD
 VIDEO	 8	 9	 USB
 TAPE	 GUIDE EPG	 0	 HDMI - BAT
 TUNER	 REPEAT	 FAV MARKER	 BLUETOOTH
 AUX - HDD	 NETFLIX	 APP	 PC
USB	YouTube	Prime Video	
BLUETOOTH	SEARCH	REPEAT A-B	RANDOM
PC			
FAV MARKER			



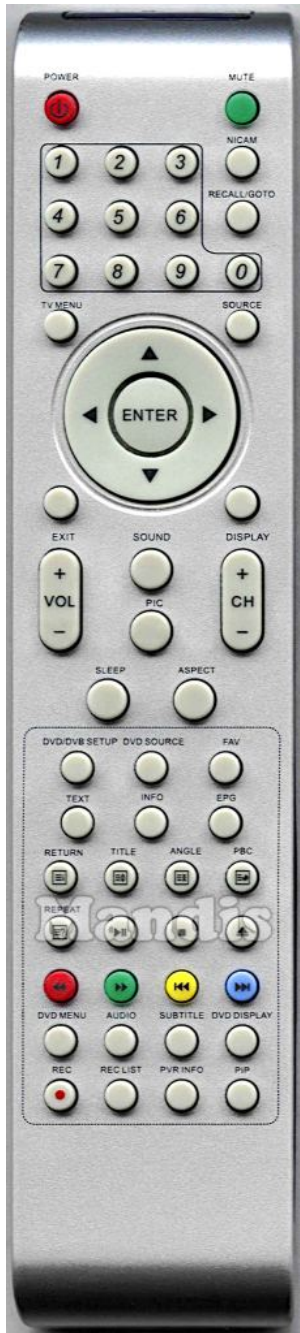

Original	Substituto
	Fav / Marker / PC 
	Text / Goto 
	Info / Angle 
	Guide / EPG / -/-- 
	Shift + Back / Return 
	Shift + Sound / Title 
	Zoom / Size 
	Shift + Stop / 
	TV/Radio / 
	Shift + Green / APP / 
	Play / Slow 
	Stop / Hold 
	Eject / Surround 
	<< / Tune- 
	Red / Netflix / Search 
	>> / Tune+ 
	Green / APP / Repeat 

Original	Substituto
	I<<< / Preset- 
	Yellow / YouTube / Repeat 
	>>>I / Preset+ 
	Blue / Prime Video / Random 
	D.Menu / Top 
	Audio / Lang I/II 
	Subtitle / EQ 
	Shift + Display / Media 
	Rec / Rec Mode 
	Smart / List 
	Shift + Info / Angle 
	Shift + Smart / List 

