



































Original	Substituto	Original	Substituto
On/Off	 Power	TV/AV	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
Still	 Pause / Step / Freeze	Menu Up	 Up
Txt Stop	 Stop / Hold	Info	 Info / Angle
Tune-	 << / Tune-	Menu Left	 Left
Tune+	 >> / Tune+	OK Enter	 OK
Tone-	 I<< / Preset-	Menu Right	 Right
Tone+	 >>I / Preset+	Back	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Swap	 Back / Return
Bright+ Mode	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	View	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Update	 D.Menu / Top	Display	 Display / Media
Help	 Setup / OPT /	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1



Original	Substituto	Original	Substituto
2	2	AV 2	Shift + AV / Input / RDS
3	3	Audio+	Shift + Vol+
4	4	Audio-	Shift + Vol-
5	5	Disp	Shift + Display / Media
6	6	On Pip	Shift + 1
7	7	Dim Pip	Shift + 2
8	8	Rotate Pip	Shift + 3
9	9	Search	Shift + Red / Netflix /
Guide -/-- 1.	Guide / EPG / -/--		
0/10	0		
2.Fav P/C 2.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
On/Off	Shift + Power		
Mix Scan	Shift + Text / Goto		

Goto

