



 















 



 


 
 



 



 











 

 

 







Original	Substituto	Original	Substituto
 Power	 Power	 I<<	 I<< / Preset-
 Sound	 Sound / Title	 >>I	 >>I / Preset+
 Mega Bass	 Audio / Lang I/II	 Pause	 Pause / Step / Freeze
 Function	 Menu / Home	 <<	 << / Tune-
 1	 1	 >>	 >> / Tune+
 2	 2	 Stop	 Stop / Hold
 3	 3	 Tune+	 Shift + >> /
 4	 4	 Vol+	 Vol+
 5	 5	 Band	 TV/Radio /
 6	 6	 Tune-	 Shift + << /
 7	 7	 Vol-	 Vol-
 8	 8		
 9	 9		
 Mode	 Picture / Format		
 0/10	 0		
 >10	 Guide / EPG / -/--		
 Play	 Play / Slow		

Original	Substituto	Original	Substituto
 I<<	 I<< / Preset-	 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze	 <<	 << / Tune-
 >>	 >> / Tune+	 Stop	 Stop / Hold
 Tune+	 Shift + >> /	 Vol+	 Vol+
 Band	 TV/Radio /	 Tune-	 Shift + << /
 Vol-	 Vol-		

