





 



























 











 























Original	Substituto
 Power	 Power
 Text	 Text / Goto
 △	 Setup / OPT /
 Help	 Zoom / Size
 Rec	 Rec / Rec Mode
 D.Menu / Top	 D.Menu / Top
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Substituto
 7	 7
 8	 8
 9	 9
 Back	 Back / Return
 0	 0
 Enter	 Fav / Marker / PC
 Vol+	 Vol+
 Language	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Up	 Up
 Info	 Info / Angle
 Left	 Left
OK	OK















 







 







 



 

























 











Original	Substituto
	Right
	Menu / Home
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Smart / List
	Picture / Format
	TV/Radio /
	Display / Media

Original	Substituto





Original		Substituto		Original		Substituto	
	Power		Power		7		7
	Text		Text / Goto		8		8
	△		Setup / OPT /		9		9
	Help		Zoom / Size		Back		Back / Return
	Rec		Rec / Rec Mode		0		0
	D.Menu / Top		D.Menu / Top		Enter		Fav / Marker / PC
	Stop		Stop / Hold		Vol+		Vol+
	<<		<< / Tune-		Language		Audio / Lang I/II
	Play / Pause		Play / Slow		CH+		CH+ / Page+
	Play / Pause		Pause / Step / Freeze		Vol-		Vol-
	>>		>> / Tune+		Mute		Mute / Dimmer
	1		1		CH-		CH- / Page-
	2		2		Guide		Guide / EPG / -/-
	3		3		Up		Up
	4		4		Info		Info / Angle
	5		5		Left		Left
	6		6		OK		OK





Original	Substituto		
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Digital TV		Smart / List
	Movie		Picture / Format
	Radio		TV/Radio /
	Media		Display / Media

Original	Substituto

