





 




 





 














 


 

 









| | Original | Substituto | | Original | Substituto |
|---|----------|---|-----------------------------|---|-----------------------|
|  | Power |  | Power |  | Right |
|  | Mute |  | Mute / Dimmer |  | OK |
|  | Shuffle |  | Blue / Prime Video / Random |  | Esc |
|  | [/] |  | >> / Preset+ |  | Snap Shot |
|  | 1 |  | 1 |  | CH+ / Page+ |
|  | 2 |  | 2 |  | CH- / Page- |
|  | 3 |  | 3 |  | Vol+ |
|  | 4 |  | 4 |  | Vol- |
|  | 5 |  | 5 |  | Pause / Step / Freeze |
|  | 6 |  | 6 |  | Rec / Rec Mode |
|  | 7 |  | 7 |  | Stop / Hold |
|  | 8 |  | 8 | | |
|  | 9 |  | 9 | | |
|  | 0 |  | 0 | | |
|  | Up |  | Up | | |
|  | Down |  | Down | | |
|  | Left |  | Left | | |

