



| Original | Substituto | Original | Substituto |
|---|------------------------|---|-----------------------------|
|  | Standby |  | Power |
|  | AV |  | AV / Input / RDS |
|  | Mute |  | Mute / Dimmer |
|  | East |  | Rec / Rec Mode |
|  | West |  | I<< / Preset- |
|  | A.Focus |  | Setup / OPT / |
|  | Q |  | Exit / Cancel / Clear |
|  | Vol+ |  | Vol+ |
|  | Up / Fav+ |  | Up |
|  | CH+ / Pg+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | CH- / Pg- |  | CH- / Page- |
|  | Down / Fav- |  | Down |
|  | List / Index |  | Smart / List |
|  | R |  | Back / Return |
|  | Sel / View |  | Display / Media |
|  | i+ / Reveal |  | Info / Angle |
|  | TV Guide / Stop |  | Guide / EPG / -/-- |
|  | TV Guide / Stop |  | Stop / Hold |
|  | TXT |  | Text / Goto |
|  | Menu / Save |  | Menu / Home |
|  | Zoom |  | Zoom / Size |
|  | Red / Add / Audio |  | Red / Netflix / Search |
|  | Green / Up date / Long |  | Green / APP / Repeat |
|  | Yellow / Del / Timer |  | Yellow / YouTube / Repeat |
|  | Blue / Freeze |  | Blue / Prime Video / Random |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |





| Original | Substituto | Original | Substituto |
|----------|------------|--------------|------------|
| 6 rmo | 6 | TUNER 6 | 6 |
| 7 pag | 7 | AUX - HDD 7 | 7 |
| 8 fuv | 8 | USB 8 | 8 |
| 9 wtv | 9 | BLUETOOTH 9 | 9 |
| 0 fuv | 0 | HDMI - BAT 0 | 0 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

