



	Original	Substituto
	Mute	Mute / Dimmer
	Power	Power
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	Recall	Back / Return
	FAV	Fav / Marker / PC
	Red	Red / Netflix / Search
	Green	Green / APP / Repeat
	Yellow	Yellow / YouTube / Repeat

	Original	Substituto
	Blue	Blue / Prime Video / Random
	Rec	Rec / Rec Mode
	I<<	I<< / Preset-
	CH+	CH+ / Page+
	Up	Up
	Info	Info / Angle
	Subtitle	Subtitle / EQ
	Vol-	Vol-
	Left	Left
	OK	OK
	Right	Right
	Vol+	Vol+
	EPG	Guide / EPG / -/-
	Menu	Menu / Home
	Down	Down
	CH-	CH- / Page-
	>>I	>>I / Preset+





	Original	Substituto	Original	Substituto
	Exit	Exit / Cancel / Clear		
	Text	Text / Goto		
	Auto	Smart / List		
	Zoom	Zoom / Size		
	LAN/Audio	Audio / Lang I/II		
	Tv/Radio	TV/Radio /		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		

