























































Original	Substituto	Original	Substituto
 RC	RC	 D.Menu / Top	
 M	M	 Menu / Home	
 F	F	 Smart / List	
 Power	Power	 Power	
 E	E	 Display / Media	
 i	i	 Info / Angle	
 Sleep / Timer	Sleep / Timer	 Sleep / Timer	
 TV	TV	 TV/Radio /	
 Up	Up	 Up	
 Left	Left	 Left	
 OK	OK	 OK	
 Right	Right	 Right	
 Down	Down	 Down	
 Mute	Mute / Dimmer	 Mute / Dimmer	
 A	A	 Audio / Lang I/II	
 R	R	 Back / Return	
 1	1	 1	

Original	Substituto	Original	Substituto
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0

