





 


 

 











 




Original	Substituto	Original	Substituto
	Power		Power
	Vol+		Vol+
	Vol-		Vol-
	Home		Menu / Home
	P+		CH+ / Page+
	P-		CH- / Page-
	Guide		Guide / EPG / -/--
	Source		AV / Input / RDS
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	OK		OK
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play / Slow
	Stop		Stop / Hold

Original	Substituto	Original	Substituto
	Smart Colours		Display / Media
	123#		1
	Rakuten Tv		TV/Radio /
	Netflix		Red / Netflix / Search
	FPlay		Fav / Marker / PC

