




Original	Substituto
	Mute / Dimmer
	TV / Input / RDS
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Smart / List
	0
	TV/Radio /
	CH+ / Page+
	Guide / EPG / -/-

Original	Substituto
	Vol+
	CH- / Page-
	Fav / Marker / PC
	Vol-
	Info / Angle
	Up
	Menu / Home
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Red / Audio
	Green / APP / Repeat
	Green / Subt




Original
Substituto

 TEXT	Yellow / Text	 GOTO TEXT	Text / Goto
 TEXT	Yellow / Text	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 SLEEP	Blue / Sleep	 Prime Video RANDOM	Blue / Prime Video / Random
 SLEEP	Blue / Sleep	 TIMER SLEEP	Sleep / Timer
 OPTION	Option 1	 TOP MENU D.MENU	D.Menu / Top
 OPTION	Option 2	 OPT-TOOLS SETUP	Setup / OPT /
 PAL/NTSC	Pal / NTSC	 FORMAT PICTURE	Picture / Format
 PAUSE	Pause	 HOLD	Stop / Hold
 PAUSE	Freeze	 STEP-FREEZE	Pause / Step / Freeze
 ZOOM	Zoom	 SIZE ZOOM	Zoom / Size

Original
Substituto

